

INTERNATIONAL SET A




A




B



C

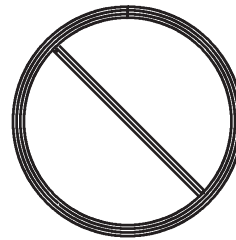

D

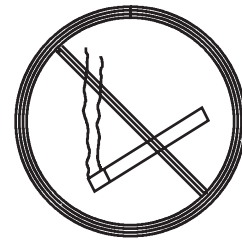

E

Proper Use of External Cartridges

With any piece of equipment, there are some common problems that can develop by failure to follow the correct procedures. The guidelines provided are usually applicable to most cartridges, however you should refer to your manufacturer's specific instructions for your particular type of font cartridge.

We do differ from what the Wizzard manual says - NEVER, NEVER insert or remove your EFC while your Wizzard is on. Yes, you may have done it for years and never had a problem. But we have repaired more than 100 Wizzard boards where the owners 'wiggled' the font/logo cartridge when inserting or removing it, and shorted out the motherboard.

Using The Cartridge

After the cartridge is inserted, turn on your Wizzard. Move the cursor to the font and press the SPACEBAR to toggle through the fonts. Your cartridge font/logo name should appear. After you set the margins, letter height and baseline, enter the character from the key sheet to get the desired character of the font or logo set.