

CorelDRAW 10 Setup

- * Load CorelDRAW into your computer system.
- * Using Windows Explorer, locate the C:\Program Files\Corel\Graphics10\Custom\Palettes folder. Place the ULS Printer Driver Disk into your floppy disk drive. Access the floppy drive and find a file called "ULS.CPL" copy this file over to the "Palettes" folder.
- * While still in Explorer, locate a file called "corelapp.ini" located in the C:\Corel\Graphics10\Config folder. Double-click on the file it will open up in Notepad. Scroll down PAST the semi-colons to the [Config] header. Then scroll down about 23 lines to the line that reads "Fontrasterizer=1". Change the "1" to a "0" (this is a zero, not an o). Save this file and then close Notepad.
- * Start CorelDRAW and start a "New Graphic".
- * In the main menu at the top of the screen, click on "Window", then "Color Palettes", and then click on "None". Once again click on "Window", then "Color Palettes" then click on "Open Palette". After the "Open Palette" pop-up box appears, double-click on "ULS.CPL". The color palette will now appear on the right side of the screen. Directly above the Black-colored square there is a box, click on this box and then click "Set as Default".
- * On the "Property Bar", click on the "Landscape" orientation (the sideways rectangle). If you would like the drawing units in metric, choose "millimeters" from the drop down list. Now type in the page width and height that matches your laser platform.
- * We now need to adjust the vertical ruler, on the left side of the screen, to match the rulers in the laser system. To do this, we need to adjust the ruler's vertical origin. Double-click directly on the vertical (side) ruler. The "Options" dialog box will appear. In the "Vertical Origin" box, type in the same height value as you did when you set up the page height in the previous step. For example "12 inches" for an M Class machine. If you would like the scale to be displayed in tenths, choose "10 per tick" in the "Tick Division" drop-down list box.
- * While still in the "Options" dialog box, click on "+" sign next to "Global" to expand the list. Click on "+" sign next to "Printing" to expand the list then click on "Driver Compatibility". In the "Printer" drop-down list select the laser system if it is not displayed already. Below the dropdown list, click on "All text as graphics", "Output Bitmaps in 64K chunks", and "Send bands to driver". Uncheck (deselect) "Send beziers and paths to driver". Now click on "OK" to close the "Options" dialog box.
- * The next step is to set the default value for the line width and color when drawing graphic objects. To do this, click on the "Outline Tool", then the "Outline Pen Dialog" in the flyout. With "Graphic" being the only one selected, click on "OK", and then choose the color "Red" from the "Color" box. Next to the "Width" box underneath the color box, click on the drop down list box and choose "inches" as the units. Now, in the "Width" box click on the drop down list and click on "Hairline" and then click on "OK". This sets the default line width for Graphics.
- * Now, at the top of the screen, click on "Tools", then "Color Management". When the Color Management screen will appears, at the bottom left side of the screen, click on the "Style" drop down list arrow. Find "Color Management Off", click on it, then click on "OK".
- * Finally, at the top of the screen, click on "Tools", then "Options", then "Document", then select "Save options as defaults for new documents". Make sure ALL the options listed are selected then click "OK".

The setup defaults for CorelDRAW 10 are now complete. Whenever you start a new document, all of the default settings that we had setup will automatically apply to the new document